

# SeedStar<sup>2</sup> Planter Quick Reference Guide

## With Optional RowCommand<sup>TM</sup>

### Drive Status Bars



**Green Bars:** Section active and ready to plant.



**Black Bars:** Section deactivated manually by operator.



**Outlined Bars:** Section deactivated by SwathControl<sup>TM</sup> command (when activated).

**Bars Not Visible:** Section active, but cannot be controlled manually or with RowCommand<sup>TM</sup>.

**RowCommand<sup>TM</sup> Buttons:** Select buttons to turn sections on and off manually.

**Target Pneumatic Down Force Level:** Select button to view Pneumatic Down Force Control Panel

**Pneumatic Down Force System Indicator Arrows:** Up arrow indicates system is increasing down force level.

Down arrow indicates system is decreasing down force level

## Planter At a Glance

**Black bars** indicate row is planting normally.


**Orange bars** indicate row is planting above or below alarm setpoints.

**Red bars** indicate row is not planting.


## Drives Status ICON



**Clutch Icon:** Sections can only be controlled manually by operator.

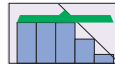

**Section Icon:** Sections are controlled by John Deere Section Control<sup>TM</sup> (when activated).

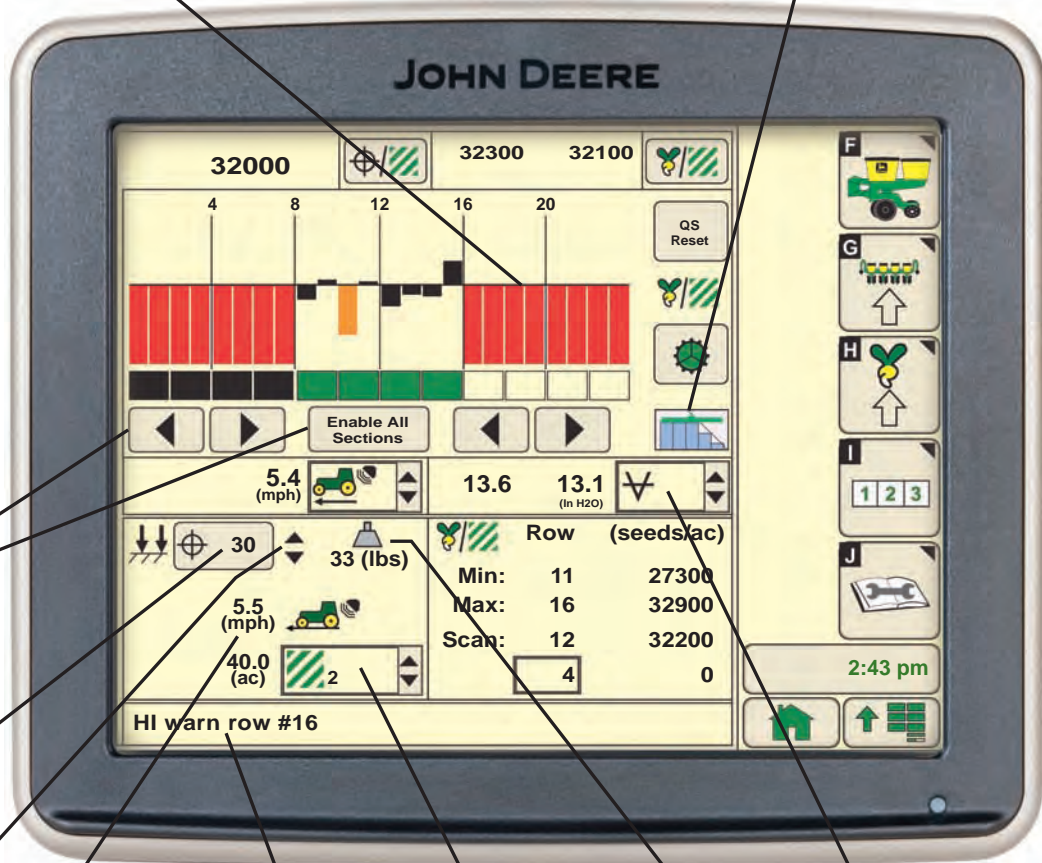

Speed Display

Caution Message Display

User Defined Totals

Actual Pneumatic Down Force Level

Vacuum Level Icon

## Population and Rates



**Target Seeds per Area** displays the desired seeding rate entered in Planter Rates Setup. On VRD machines, select this button to toggle between programmed rates including  $R_x$  prescriptions (Rate 6, VRD only).



**Average Seeds per Area** displays the actual average rate planted. Select button to toggle between whole planter average and drive section average.

## Other Useful Buttons



Toggle Home Screens




Enter, Done, Save, Finish



Toggle



Rotate Seed Meters

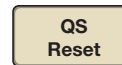

Quick Start Reset




Cancel


## Getting Started




**Planter – Main:** Select for planter main run screen.

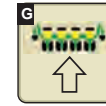

**Planter – Configuration:** Select to change planter frame, drives, and sensor configuration.

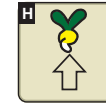

**Planter – Rates:** Select to change crop type, rates, and meter configuration.

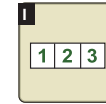


**Totals:** Select to view planted area, hours, and calculators.



**Diagnostics:** Select to view sensor readings and fault codes.

## Pneumatic Down Force Control Panel

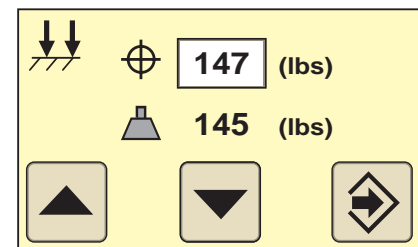

- Enter target down force in input box.
- Select up or down arrow buttons to change pneumatic down force by preset Step Value.
- Enter low down force level alarm set point and Step value in PDF Air Pressure Setup Screen.
- Select: Menu>>Planter>>Configuration Softkey>>Sensor Tab>>Select PDF Air Pressure from drop down menu.

## Crop Setup – Ground Drive

Select **Rates** Softkey (H).

Select **Crop Name** from drop down menu. Select desired crop from list. If desired crop name is not listed, select a **Custom** crop name.

Select **Target Rate** input box and enter desired population.

High and low warning limits are automatically set to a percentage above and below target rate. To change limits, select **High** and **Low Warning** input boxes and enter a new value.

Refer to **Rate Charts & Settings** Manual or Seed Transmission Sprocket Calculator (Menu>>Planter>>Totals>>Calculator>>Seed Transmission).

To access Seed Estimators and Vacuum Calculator select **Totals** softkey (I) >> **Calc** tab >> and choose the desired calculator from the drop down menu.

## Standard Run Screen

### Planter At a Glance

**Black** bars indicate row is planting normally.


**Orange** bars indicate row is planting above or below alarm setpoints.

**Red** bars indicate row is not planting.

**Drives Status Bar**

**Green** bar indicates that clutch or motor is engaged and drives are active.

**Gray** bar indicates that clutch or motor is disengaged and drives are inactive.

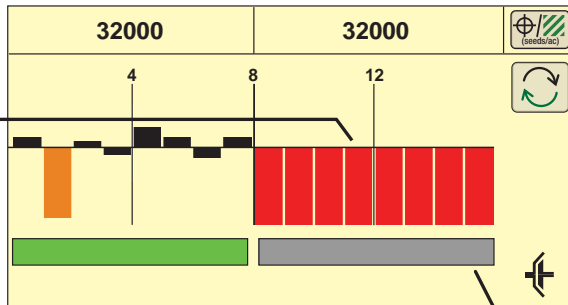

**Transport Mode:**



To disable seed sensor warnings while in transport, navigate to: Planter >> Planter Configuration >> depress "Transport Mode" key. To disable "Transport Mode" to resume planting, depress key on screen.

### Headland Warning Suppression:

Check box (Planter Configuration >> Sensor >> Seed) to disable seed sensor warnings when the planter is raised in field position (requires a height sensor and height sensor must be calibrated).

## Crop Setup – Variable Rate Drive

Select **Rates** Softkey (H).

Select **Use 1 Rate for All Motors** check box. A check indicates one rate for all motors. An empty box indicates different rates for each motor.

Rate 6 is used for map based prescription. To enable controller to use a prescription, select the **On** drop down box under rate 6. From RUN screen select the Rx rate. Once rate is selected, the run page has a small Rx indicator near the Target Seeds per Area icon.

Select **Crop Name** from drop down menu. Select desired crop from list. If desired crop name is not listed, select a **Custom** crop name.

Select **Disk Type** drop down menu. If planter has mechanical meters, mechanical meter selections appear. If planter has vacuum meters, vacuum disk selections appear. Select meter or crop from list.

Select **Seed Disk** drop down menu and select the vacuum disk used. Verify this disk is in meter.

Select **Show Rates** button, then select **Change Rates** button.

If using different rates for each motor, select **Motor** drop down menu to assign rates to each motor.

Select **Rate** drop down menu and choose a rate from the list to assign a population to that rate.

Select **Target** input box and enter the target population for the selected rate.

High and low warning limits are automatically set to a percentage above and below target rate. To change limits, select **High** and **Low Warning** input boxes and enter a new value.

To see a rate on the RUN page as a choice, select **On** and **Off** drop down box and choose **ON**.

Select **Enter** button.

## VRD Status

1.



**No Activity**

2.



**Wheel Motion, Sensor Active**

3.



**Planter Lowered**

4.



**Drives Engaged**